


FRONT SEAT INNER BELT ASSEMBLY

COMPONENTS

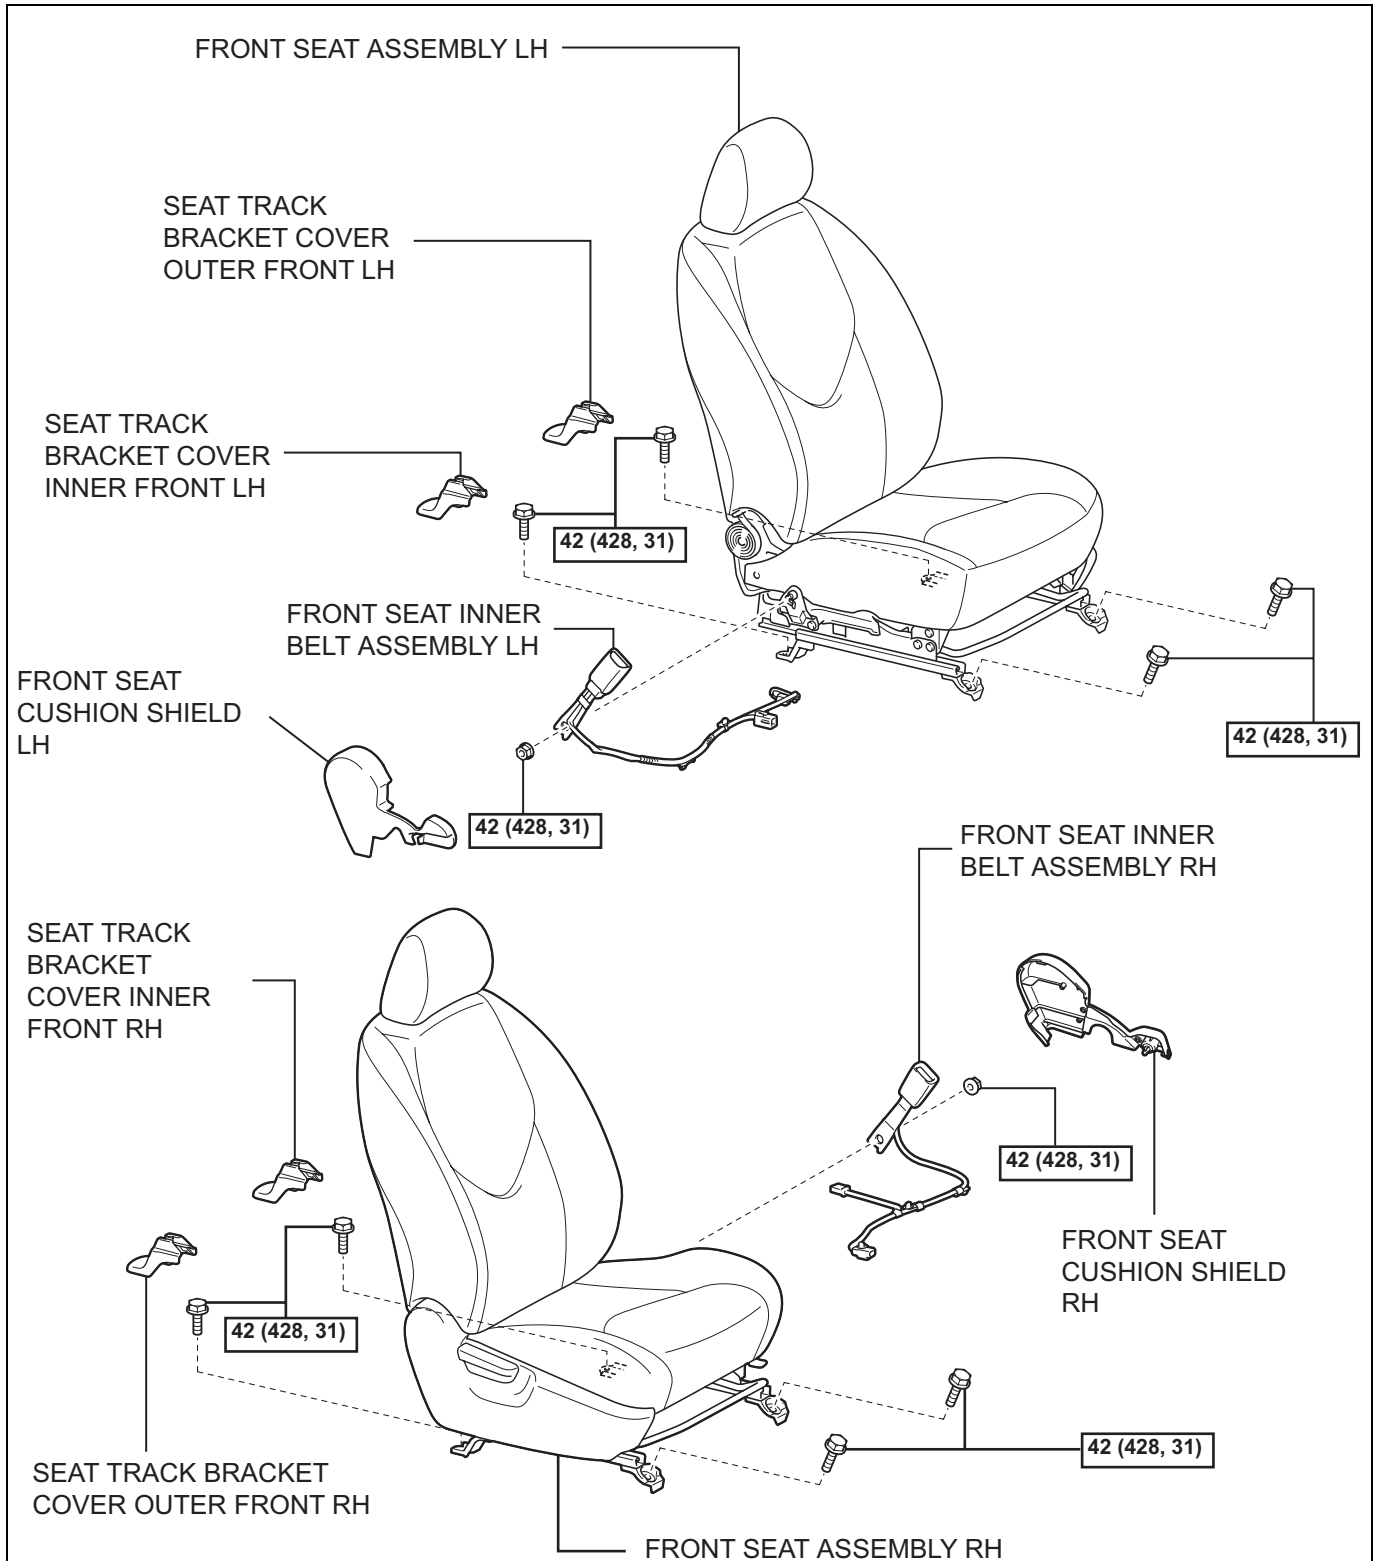

N*m (kgf*cm, ft.*lbf) : Specified torque

SB


REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT SEAT TRACK BRACKET OUTER COVER LH** (See page [SE-11](#))
3. **REMOVE FRONT SEAT TRACK BRACKET INNER COVER LH** (See page [SE-11](#))
4. **REMOVE SEAT TRACK BRACKET COVER OUTER FRONT RH**
 - (a) Use the same procedures described for the LH side.
5. **REMOVE SEAT TRACK BRACKET COVER INNER FRONT RH**
 - (a) Use the same procedures described for the LH side.
6. **REMOVE FRONT SEAT ASSEMBLY (for Power Seat)** (See page [SE-27](#))
7. **REMOVE FRONT SEAT ASSEMBLY (for Manual Seat)** (See page [SE-11](#))
8. **REMOVE FRONT SEAT CUSHION SHIELD RH (for Power Seat)** (See page [SE-29](#))
9. **REMOVE FRONT SEAT CUSHION INNER SHIELD LH (for Manual Seat)** (See page [SE-13](#))
10. **REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)**
 - (a) for Driver Seat:
Disconnect the 2 connectors and detach the 2 clamps.
 - (b) for Passenger Seat:
Disconnect the connector and detach the 2 clamps.
 - (c) Remove the nut and seat belt.
11. **REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)**
 - (a) for Driver Seat:
Disconnect the 2 connectors and detach the 3 clamps.
 - (b) for Passenger Seat:
Disconnect the connector and detach the 2 clamps.

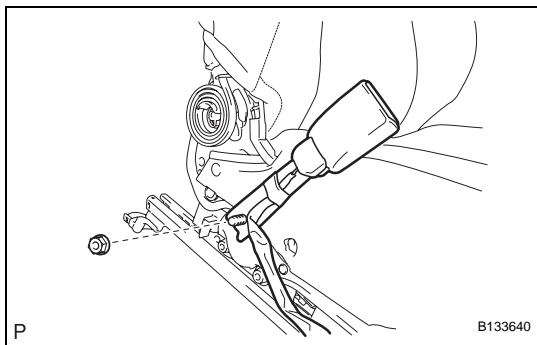

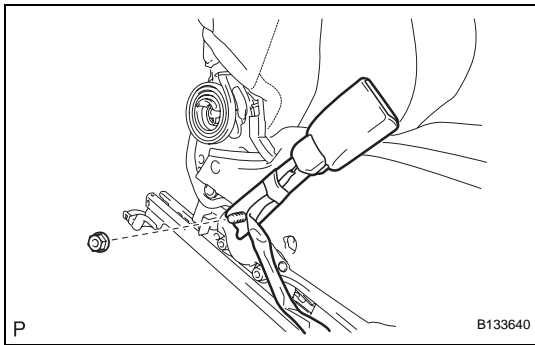


(c) Remove the nut and seat belt.

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

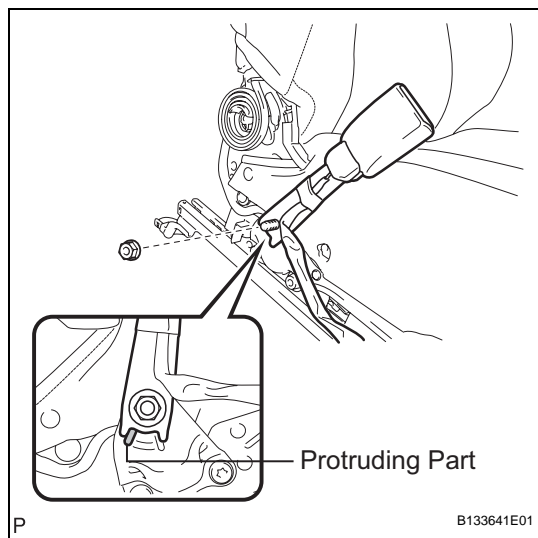

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)


- (a) Install the front seat inner belt assembly with the nut.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not overlap the anchor part of the seat belt and protruding part of the seat adjuster.

- (b) for driver seat:
Attach the 2 clamps and connect the 2 connector.
- (c) for Passenger Seat:
Attach the clamp and connect the 2 connector.

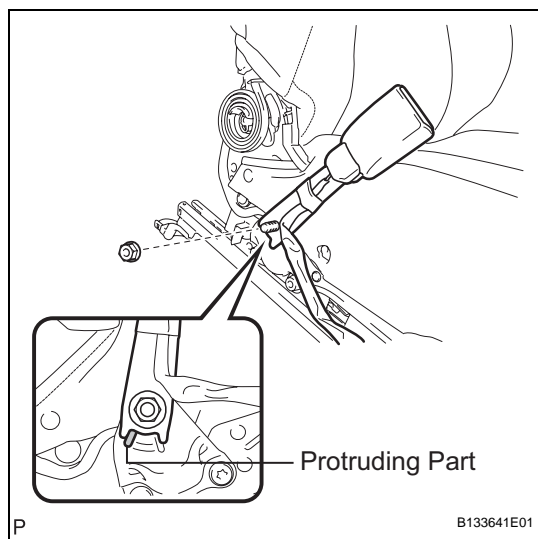

2. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)

- (a) Install the front seat inner belt assembly with the nut.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not overlap the anchor part of the seat belt and protruding part of the seat adjuster.

- (b) for driver seat:
Attach the 3 clamps and connect the 2 connector.
- (c) for Passenger Seat:
Attach the 2 clamps and connect the connector.

3. INSTALL FRONT SEAT CUSHION INNER SHIELD LH (See page [SE-21](#))

4. INSTALL FRONT SEAT CUSHION INNER SHIELD RH (See page [SE-21](#))

5. INSTALL FRONT SEAT ASSEMBLY (for Power Seat) (See page [SE-27](#))

6. INSTALL FRONT SEAT ASSEMBLY (for Manual Seat) (See page [SE-11](#))

7. INSTALL FRONT SEAT TRACK BRACKET OUTER COVER LH (See page [SE-23](#))

8. INSTALL FRONT SEAT TRACK BRACKET INNER COVER LH (See page [SE-23](#))

9. INSTALL FRONT SEAT TRACK BRACKET INNER COVER RH

- (a) Use the same procedures described for the LH side.

10. INSTALL FRONT SEAT TRACK BRACKET OUTER COVER RH

(a) Use the same procedures described for the LH side.

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL